


# For damp proofing, follow the following steps:


**01**

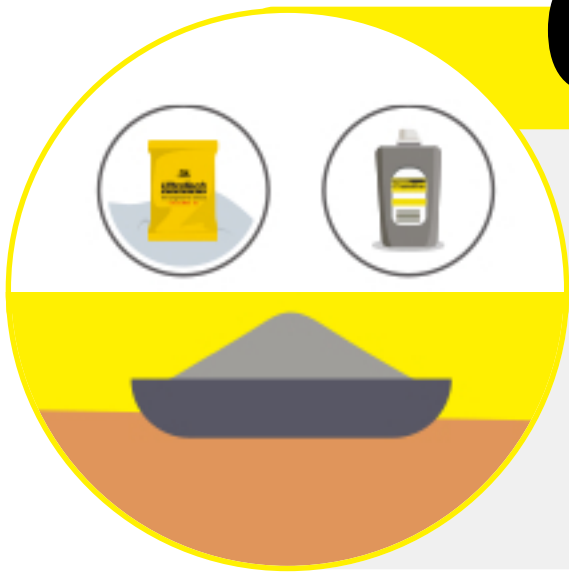

While doing the work of damp proofing, a layer of a mixture of concrete and waterproofing agent like C'retePro is applied on the foundation before constructing a wall.

**02**

This layer should be 75 mm or 3 inches thick, so that it does not allow the dampness to climb up.

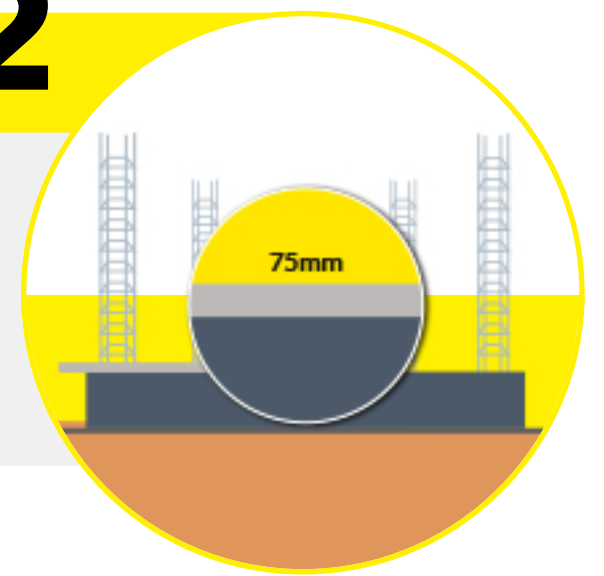

**03**



The damp proofing course should always be away from the level of the water splashing up from the ground, therefore keep it about 30 cm above the highest level of the ground.



For more information on home-builing, [click here](#).