

Keep the following points related to the layout marking in mind:


01




First of all set the placement of pillars on the open (empty) plot with the help of an engineer and a mason.

02

Set the baseline and other boundaries with the help of a 2-3 feet steel rod and a thread. Ensure that the position and size of the walls should be capable of bearing the load of the building.

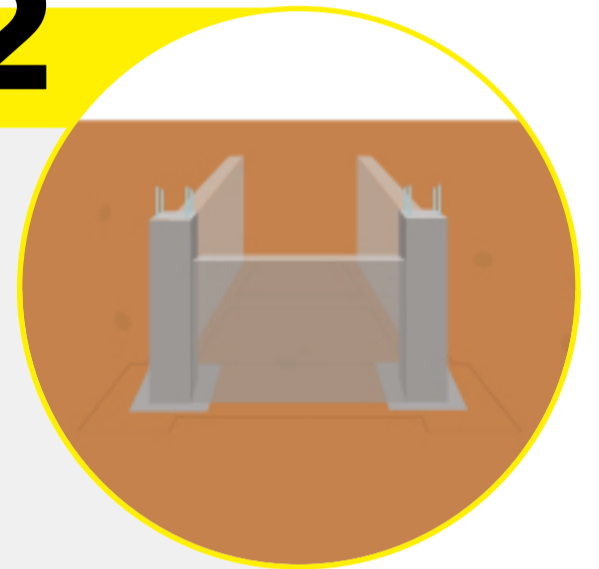


03

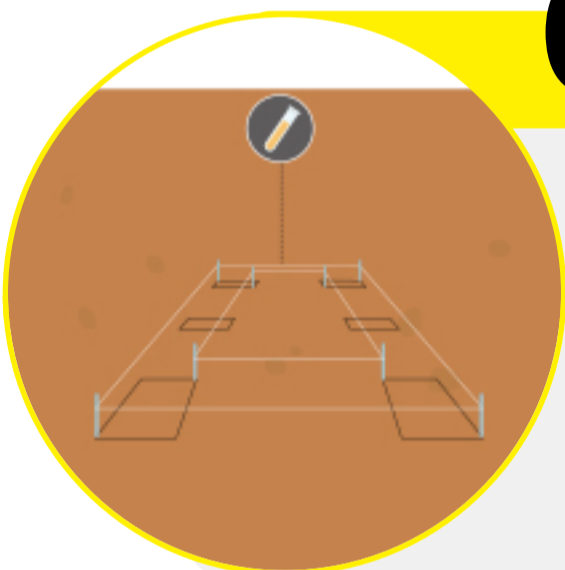


After deciding the pillar placement, mark the area for excavation with the help of a chalk powder; before starting the work of excavation, do not forget to get the soil tested.

04

The depth of the pillar depends upon the condition of the soil, more the loose soil, more the depth of the pillar.

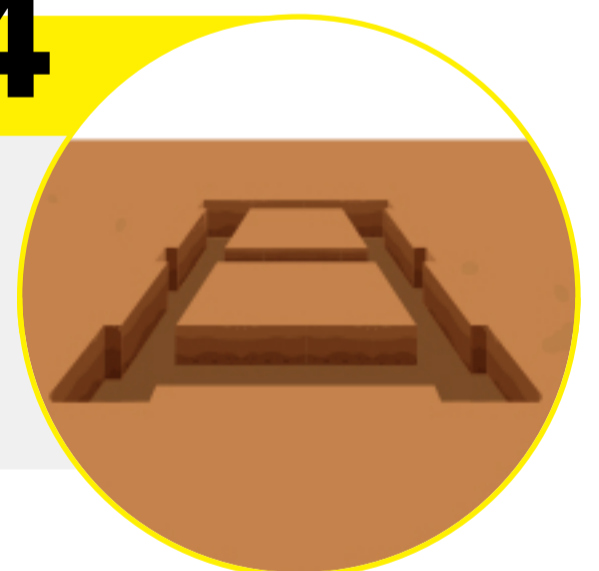

05

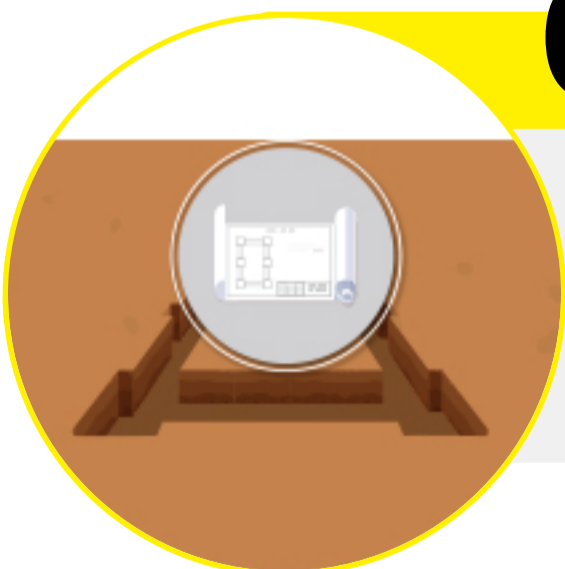

See whether the work of marking is being done according to the plan of your house.



For more information on home-builing, [click here](#).