


The correct way of constructing a plinth beam is somewhat like this:


01

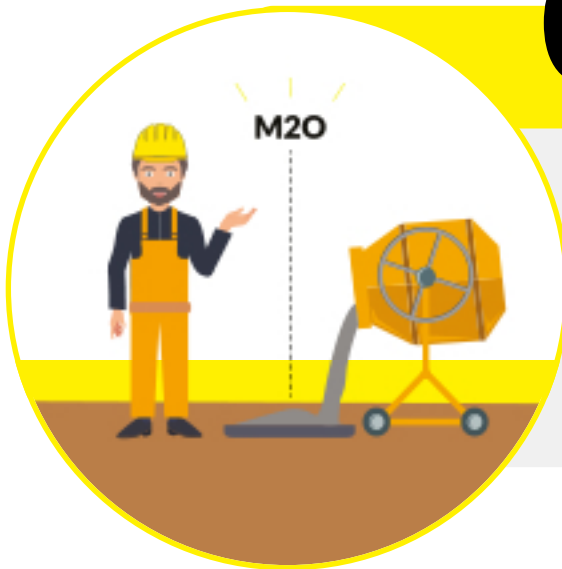

Generally, while constructing a plinth beam minimum M20 grade concrete is used.

02

The depth of the plinth beam should be at least 200 mm and its upper end should be higher than the final ground level.

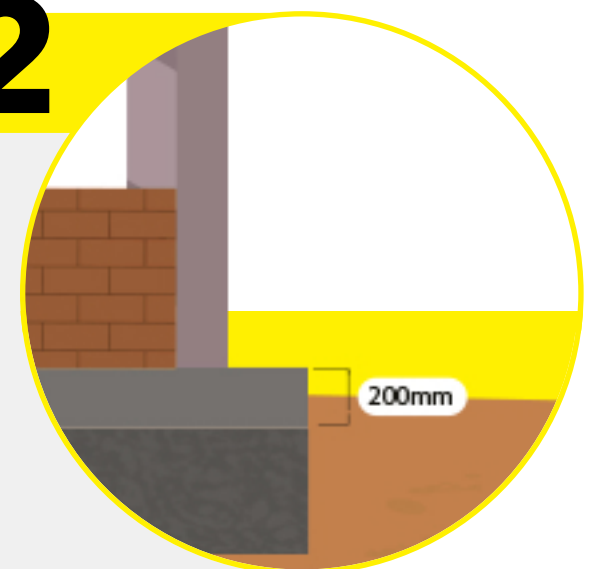

03



The shuttering position of the beam should be kept solid before pouring the concrete. Give 25 mm cover to the rods in the beam and fill the concrete after properly compacting it.

04

Take note that, it is also necessary to do curing of the beam.



For more information on home-builing, click [here](#).